

B06-FH, B09-FH, B18-FH, B24-FH

WHAT'S INCLUDED:

- 1 - Side Panel Left (a)
- 1 - Bottom Panel (b)
- 1 - Side Panel Right (c)
- 1 - Back Panel (d)
- 1 - Back Cleat (e)
- 1 - Front Cleat (f)
- 1 - Adjustable Shelf (g)
- 1 - Door Right or Left (h)
- 2 - Hinges (i)
- 2 - Hinge Plates (j)
- 4 - Adjustable Legs (k)
- 2 - UGO Hinge Covers (l)
- 2 - Easy Clean Corners (m)

10 - Dowels



29 - Cam Fasteners



29 - Cam Locks



4 - Shelf Supports



15 - Screws




4 - Leg Fasteners



* We include some spare fasteners



Assembled Cabinet

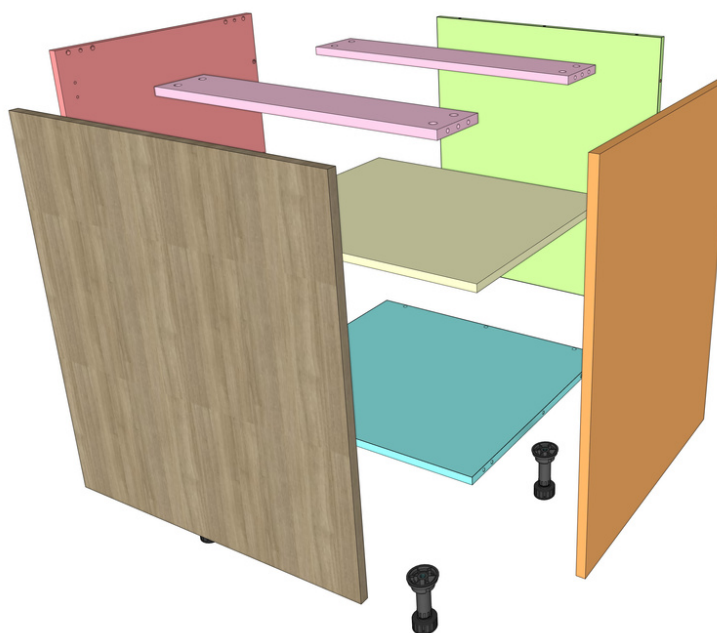

Exploded View of Cabinet

TOOLS NEEDED:




Philips Screwdriver
(The Star One)



Mallet


THIS MINI-CABINET IS FOR REFERENCE ONLY!

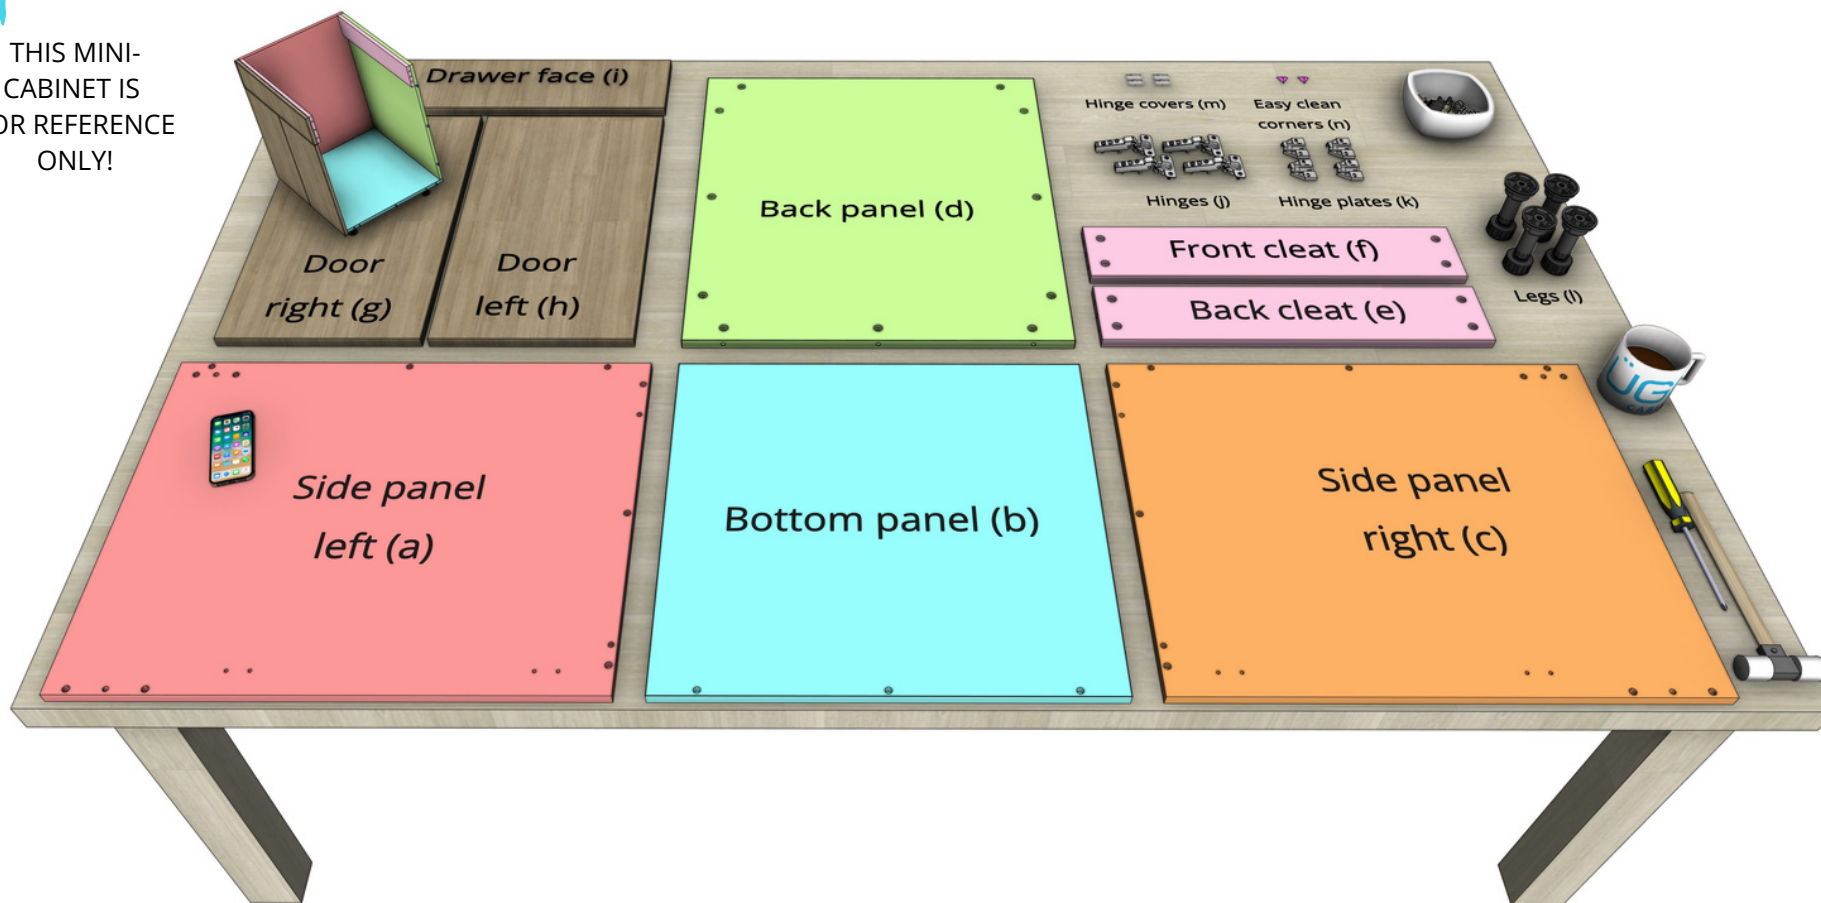

STEP 1: Grab A Coffee And Layout Your Case Pieces

* Find a suitable workspace, ideally a large table (less bending and lifting for you!) and layout all the pieces as shown. Check to make sure you have everything you need.

* You will notice throughout these assembly instructions that we always show the pieces you will actively be working on in colour while the others will be in grey.

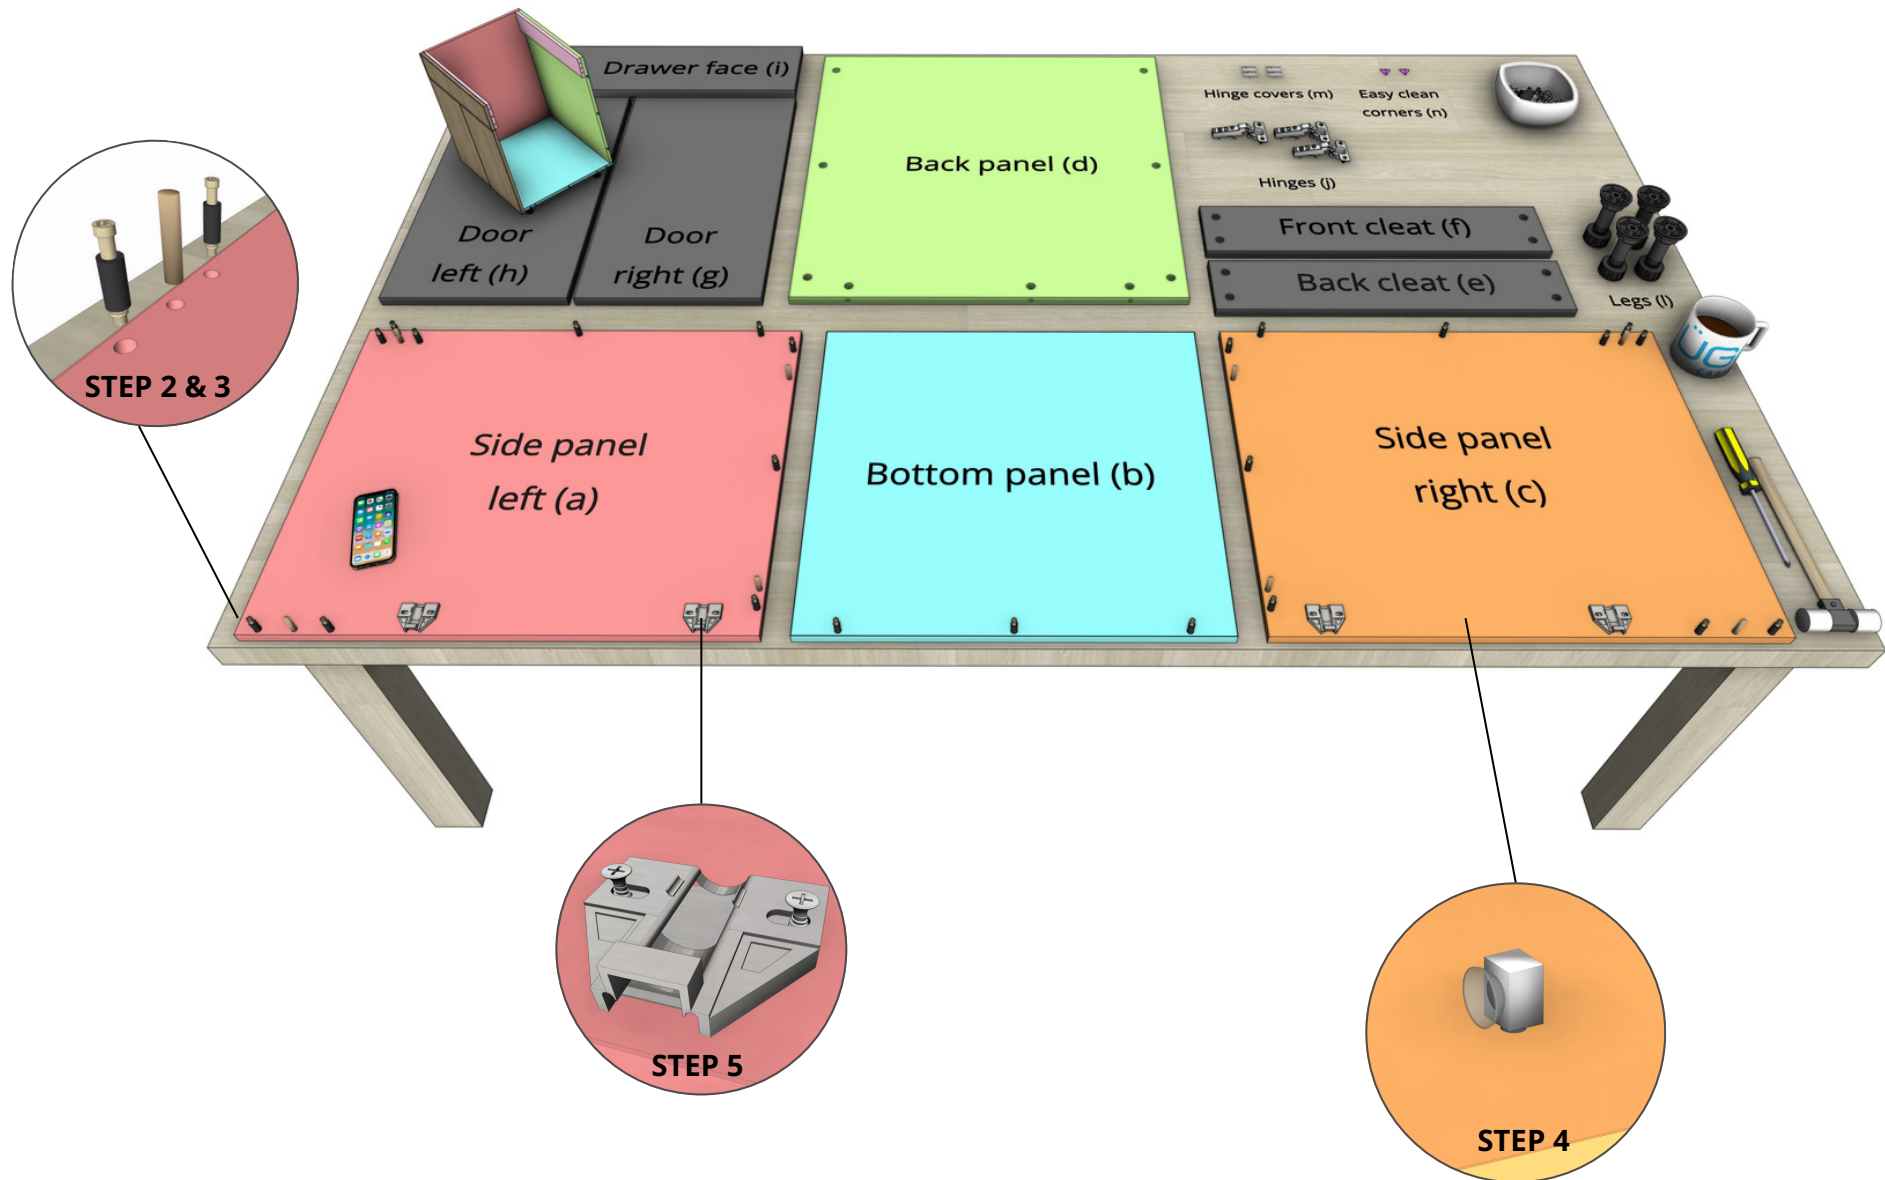


STEP 2: Using your Philips screwdriver, install cam fasteners into Side Panel Left **(a)**, Bottom Panel **(b)**, Side Panel Right **(c)** and back cleat **(e)**


STEP 3: Using your mallet, install dowels into Side Panel Left **(a)**, and Side Panel Right **(c)**

STEP 4: Place shelf clips into Side Panel Left **(a)**, and Side Panel Right **(c)**


STEP 5: Using your screwdriver, install hinge plates into Side Panel Left **(a)** for a left swinging door or, Side Panel Right **(c)** for a right swinging door. See images.

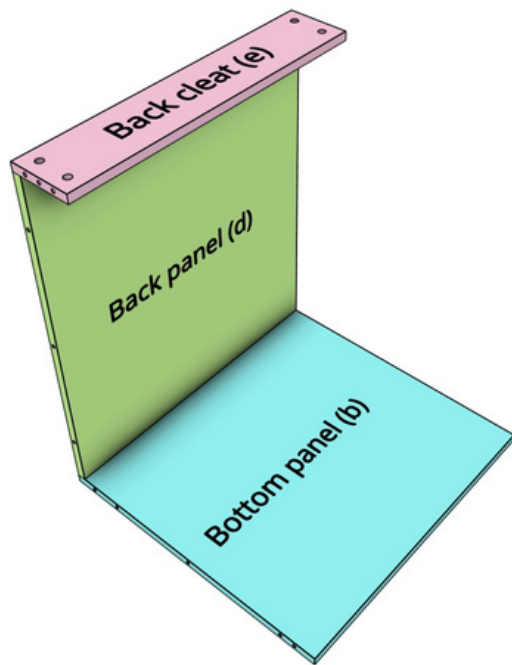


STEP 6: Place Back Panel **(d)** on the fasteners of Bottom Panel **(b)**. Place Back Cleat **(e)** on fasteners of Back Panel **(d)**.

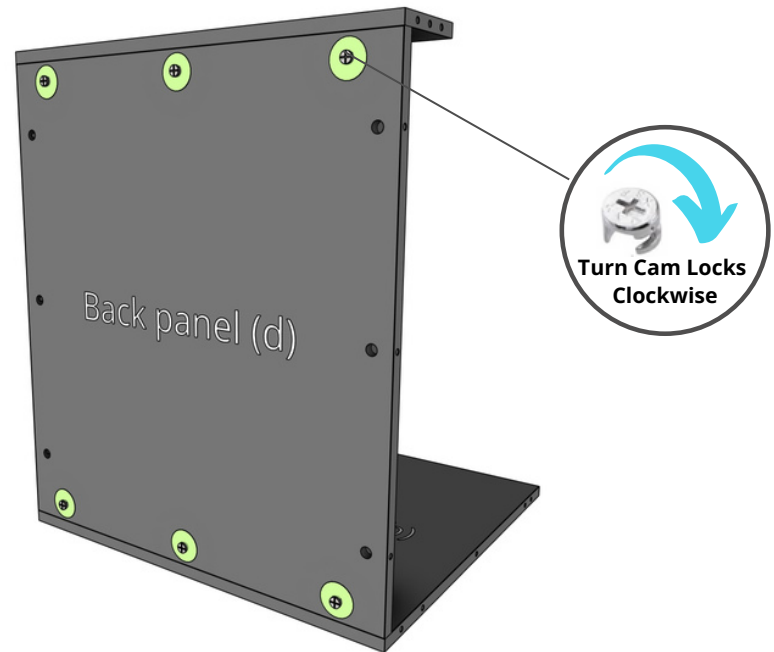


STEP 7: Insert camlocks into Back Panel **(d)**. Using your screwdriver, turn clockwise to secure.

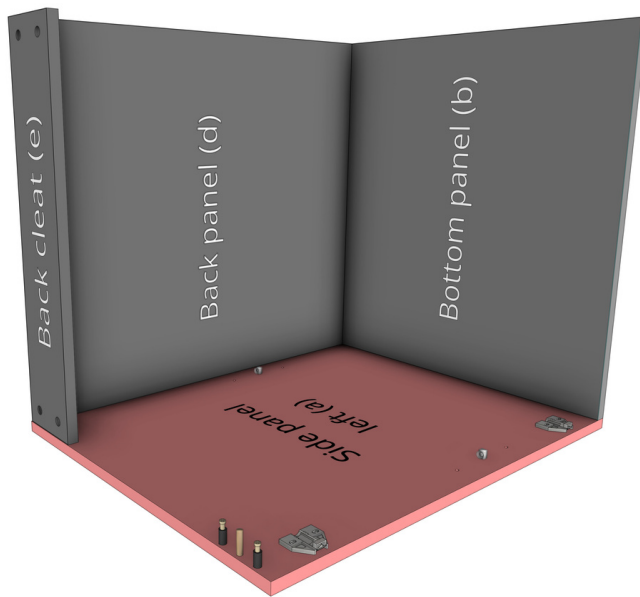


STEP 8: Lay this piece **(b,d,e)** onto the fasteners of Side Panel Left **(a)** as shown. Note, that your hinge plates may not be reflected on Side Panel Left **(a)** if you chose to have your door be hinged right.

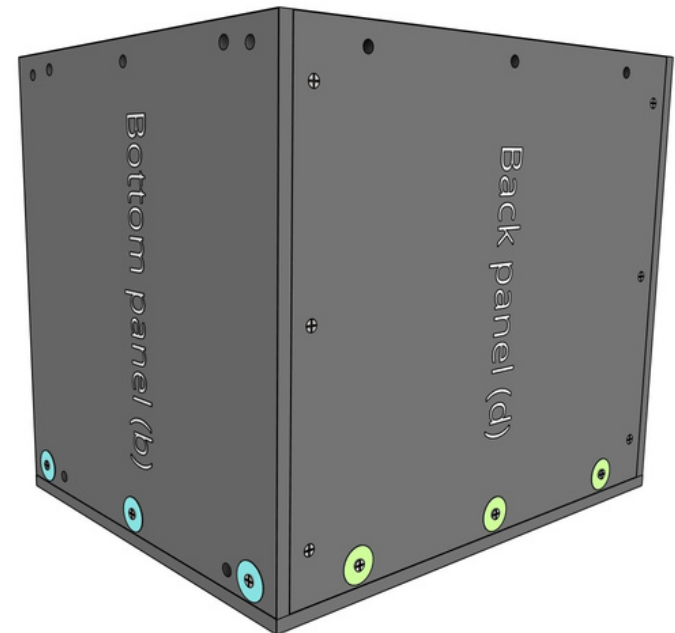


STEP 9: Insert camlocks into Bottom Panel **(b)** and Back Panel **(d)** as shown and using your screwdriver, turn clockwise to secure.

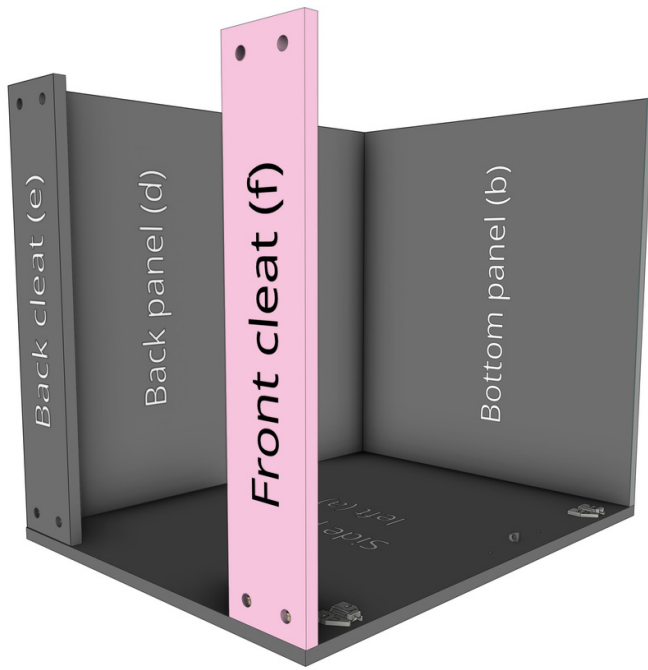


STEP 10: Place Front Cleat (f) on dowels and fasteners as shown.

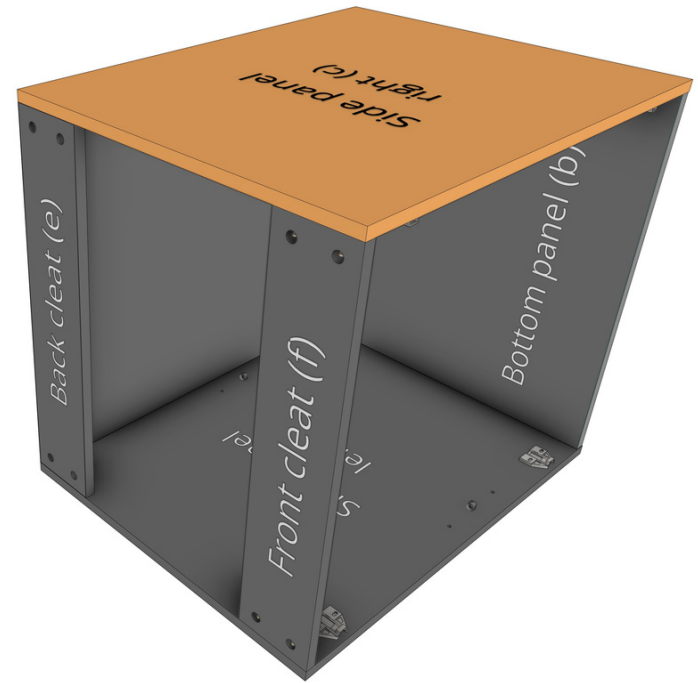

STEP 11: Place Side Panel Right (c) on top of cleats and Bottom Panel (b) and Back Panel (d) as shown.

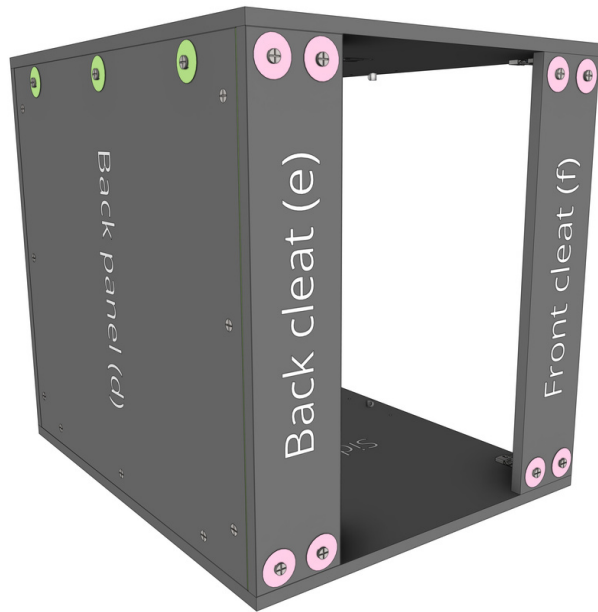

STEP 12: Position your cabinet as shown and insert cam locks into Back Cleat (e), Back Panel (d), and Front Cleat (f) and using your screwdriver, turn clockwise to secure.

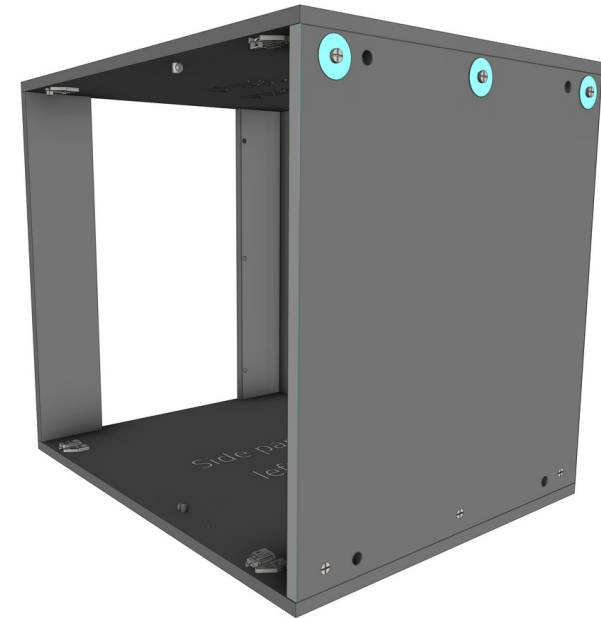

STEP 13: Rotate your cabinet as shown and insert highlighted cam locks. Using your screwdriver, turn clockwise to secure.




STEP 14: Flip your cabinet upside down so you can attach the Adjustable Legs **(k)** to Bottom Panel **(b)**. Using your hands, screw the leg fastener screws into each of the four leg holes. Screw on the legs.

ÜGO




STEP 15: Using your screwdriver, secure screws into each Adjustable Leg **(k)**.

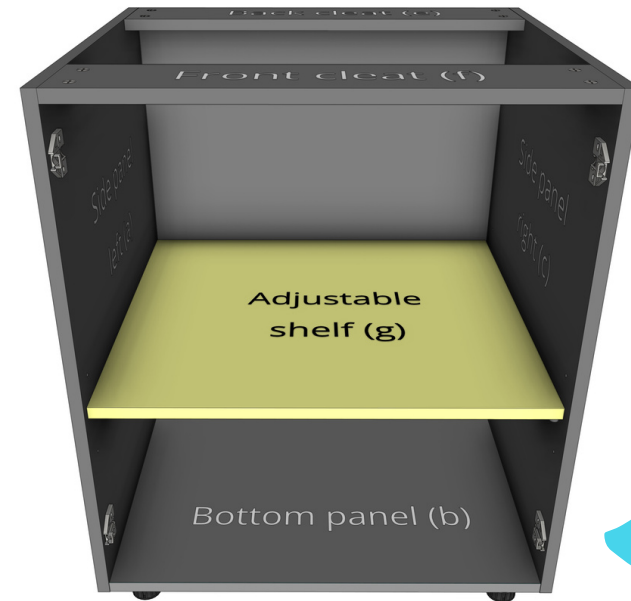


Hinge plates will only be on the side that you chose to have your door swing.




STEP 16: Flip you cabinet right side up. Place Adjustable Shelf **(g)** on the shelf clips you already installed.

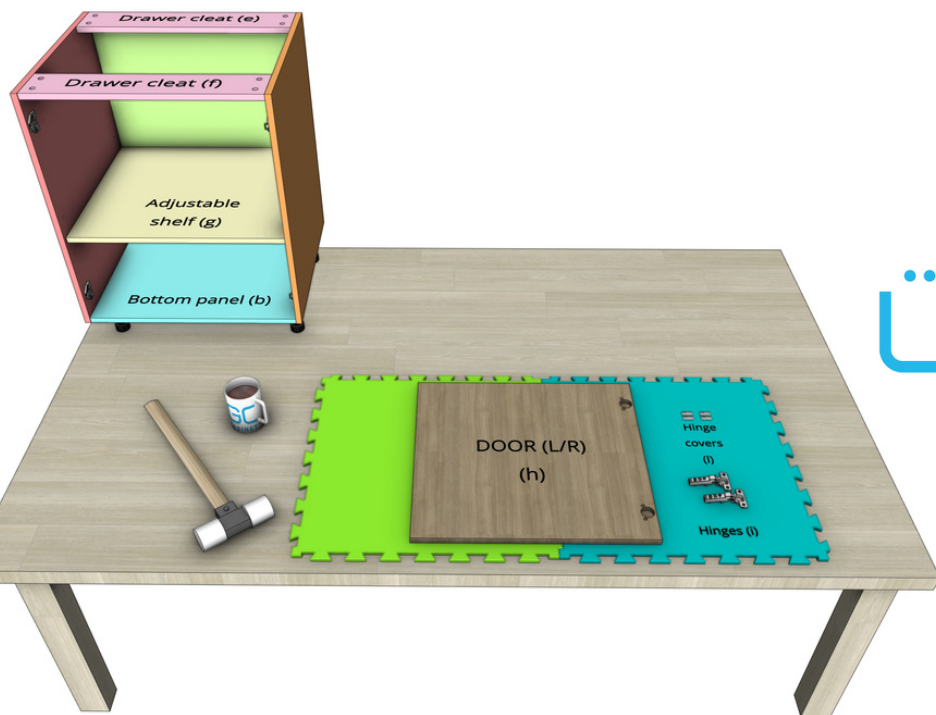

STEP 17: Lay your Door **(h)** Hinges **(i)** and Hinge Covers **(l)** out. We recommend placing foam mats (as shown), a blanket or a piece of the cardboard your cabinets came in, under the doors to minimize the chance of scratching and provide a protective buffer.

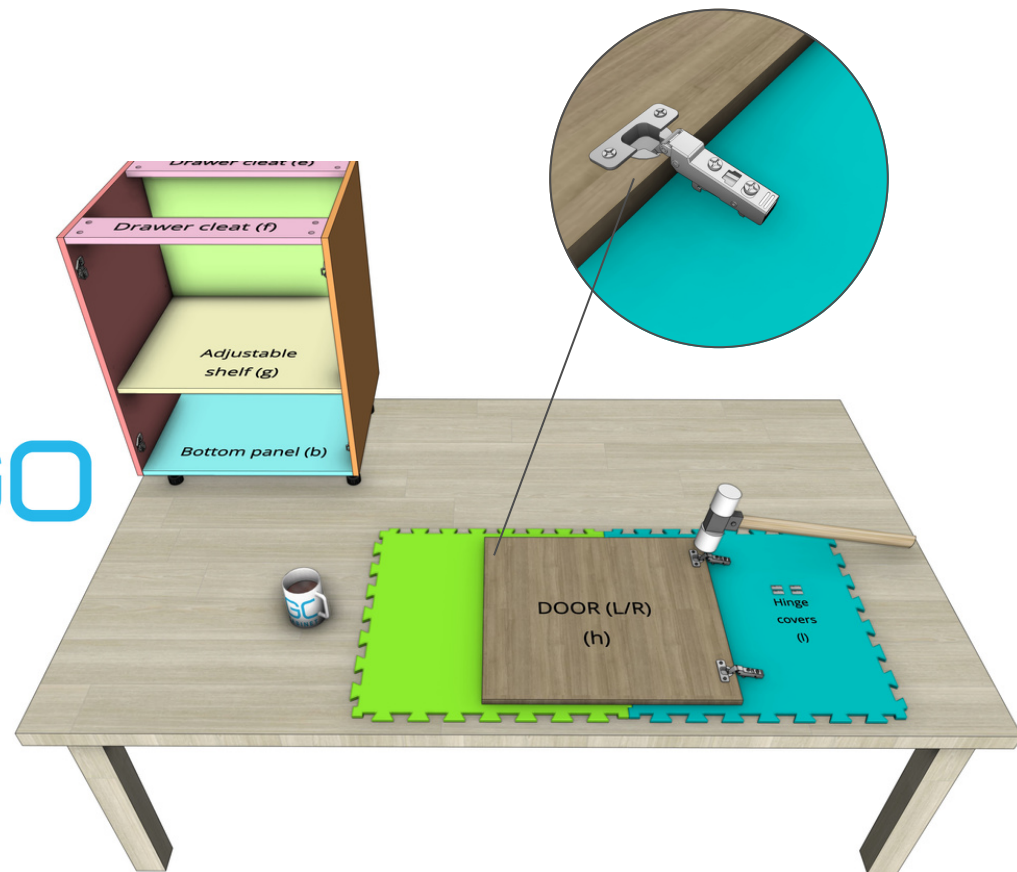


STEP 18: Using your mallet, gently hammer in the Hinges **(i)** in the pre drilled holes on Door **(h)**.

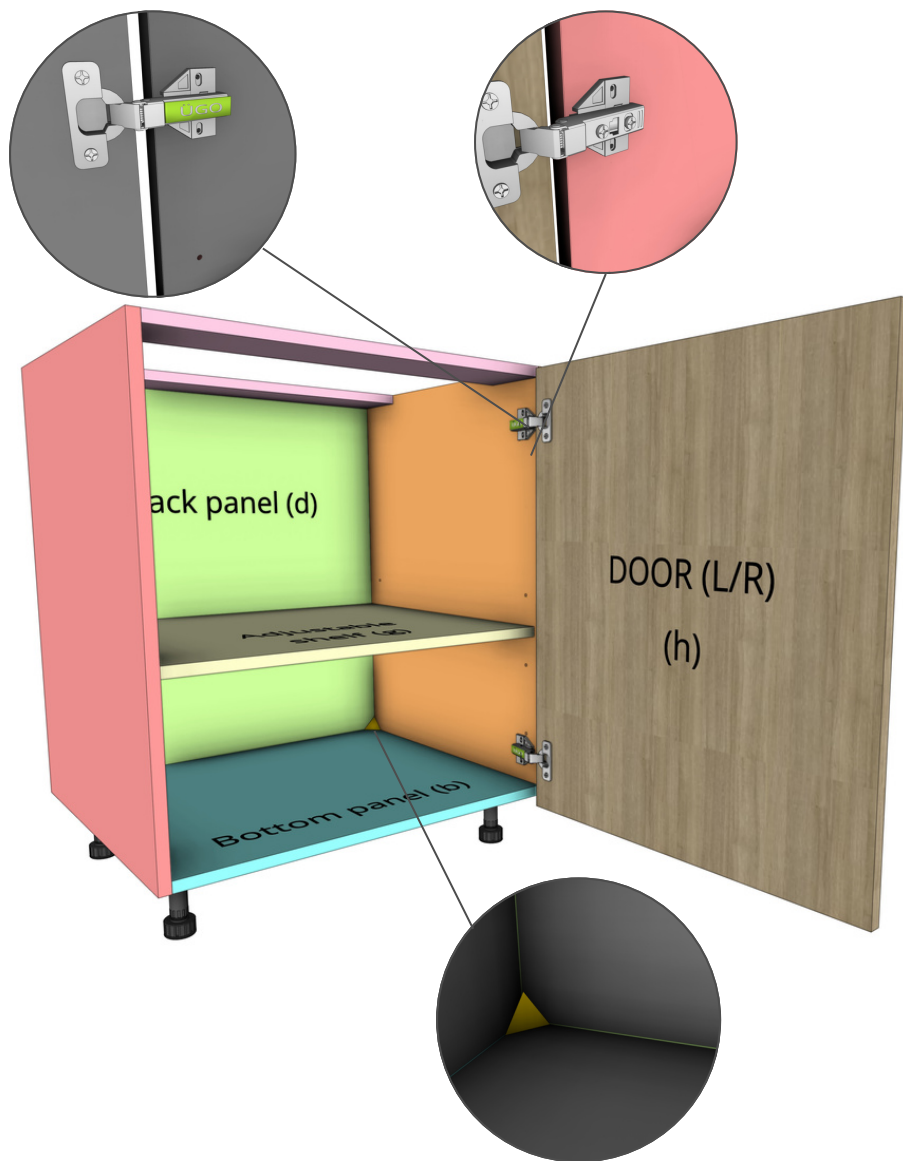


STEP 32: Install Door Left (**m**) by snapping the Hinges (**p**) onto the Hinge Plates (**o**). Repeat this step for Door Right (**l**).

STEP 33: Install UGO Hinge Covers (**v**) and Easy Clean Corners (**w**)


If your door is ...

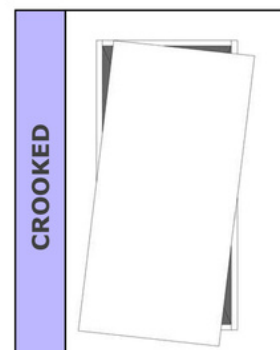

Use the Philips screwdriver and adjust using the screw highlighted in pink. To decrease the overlap turn the screw clockwise. To increase the overlap, turn the screw counter clockwise.

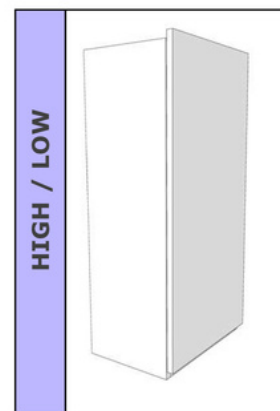

You're going to find a mounting plate on the inside of the cabinet that the hinge connects to. Use the Philips screwdriver and adjust the highlighted screw clockwise or counter-clockwise depending on whether you need to raise or lower the door.

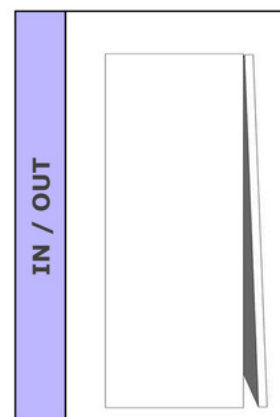

If the top of the door is sticking in/out, turn the highlighted screw on the top hinge clockwise to bring the door in and counterclockwise to bring the door out. If the door is sticking in/out on the bottom, do the same but on the bottom hinge.



STEP 34: Your doors and drawer may require some adjustments.

Follow the instructions if your doors need adjusting. To adjust drawer, see next step.

Thank you for purchasing



Or just scan this
QR code, it will
take you
directly to our
Google Reviews



If you have 2 minutes, we would love for you to write a
Google review [LINK HERE](#) and share your experience with
us!

If you have any suggestions that might make your
experience better, please email us at
hello@bluemountaikitchens.ca