



WHAT'S INCLUDED:

- 1 - Side Panel Left (a)
- 1 - Bottom Panel (b)
- 1 - Side Panel Right (c)
- 1 - Back Panel (d)
- 1 - Back Cleat (e)
- 1 - Front Cleat (f)
- 1 - Drawer Cleat (g)
- 1 - Adjustable Shelf (h)
- 1 - Drawer Bottom (i)
- 1 - Drawer Back (j)
- 1 - Drawer Face (k)
- 1 - Door Right (l)
- 1 - Door Left (m)
- 4 - Adjustable Legs (n)
- 4 - Hinge Plates (o)
- 4 - Hinges (p)
- 2 - Drawer Slides (q)
- 2 - Drawer Sides (r)
- 2 - ÜGO Drawer Covers (s)
- 2 - Rear Brackets (t)
- 2 - Front Brackets (u)
- 4 - ÜGO Hinge Covers (v)
- 2 - Easy Clean Corners (w)

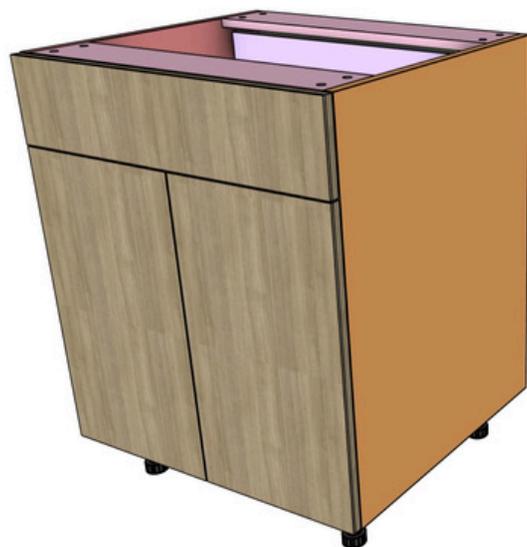

Assembled Cabinet

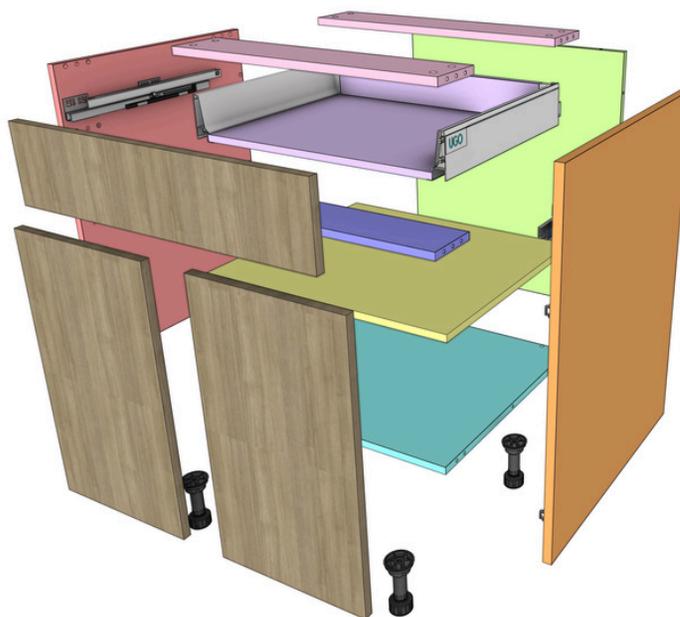

Exploded View of Cabinet

TOOLS NEEDED:



Philips Screwdriver
(The Star One)



Mallet

10 - Dowels



29 - Cam Fasteners



29 - Cam Locks



4 - Shelf Supports



15 - Screws




4 - Leg Fasteners



* We include some spare fasteners


THIS MINI-CABINET IS FOR REFERENCE ONLY!

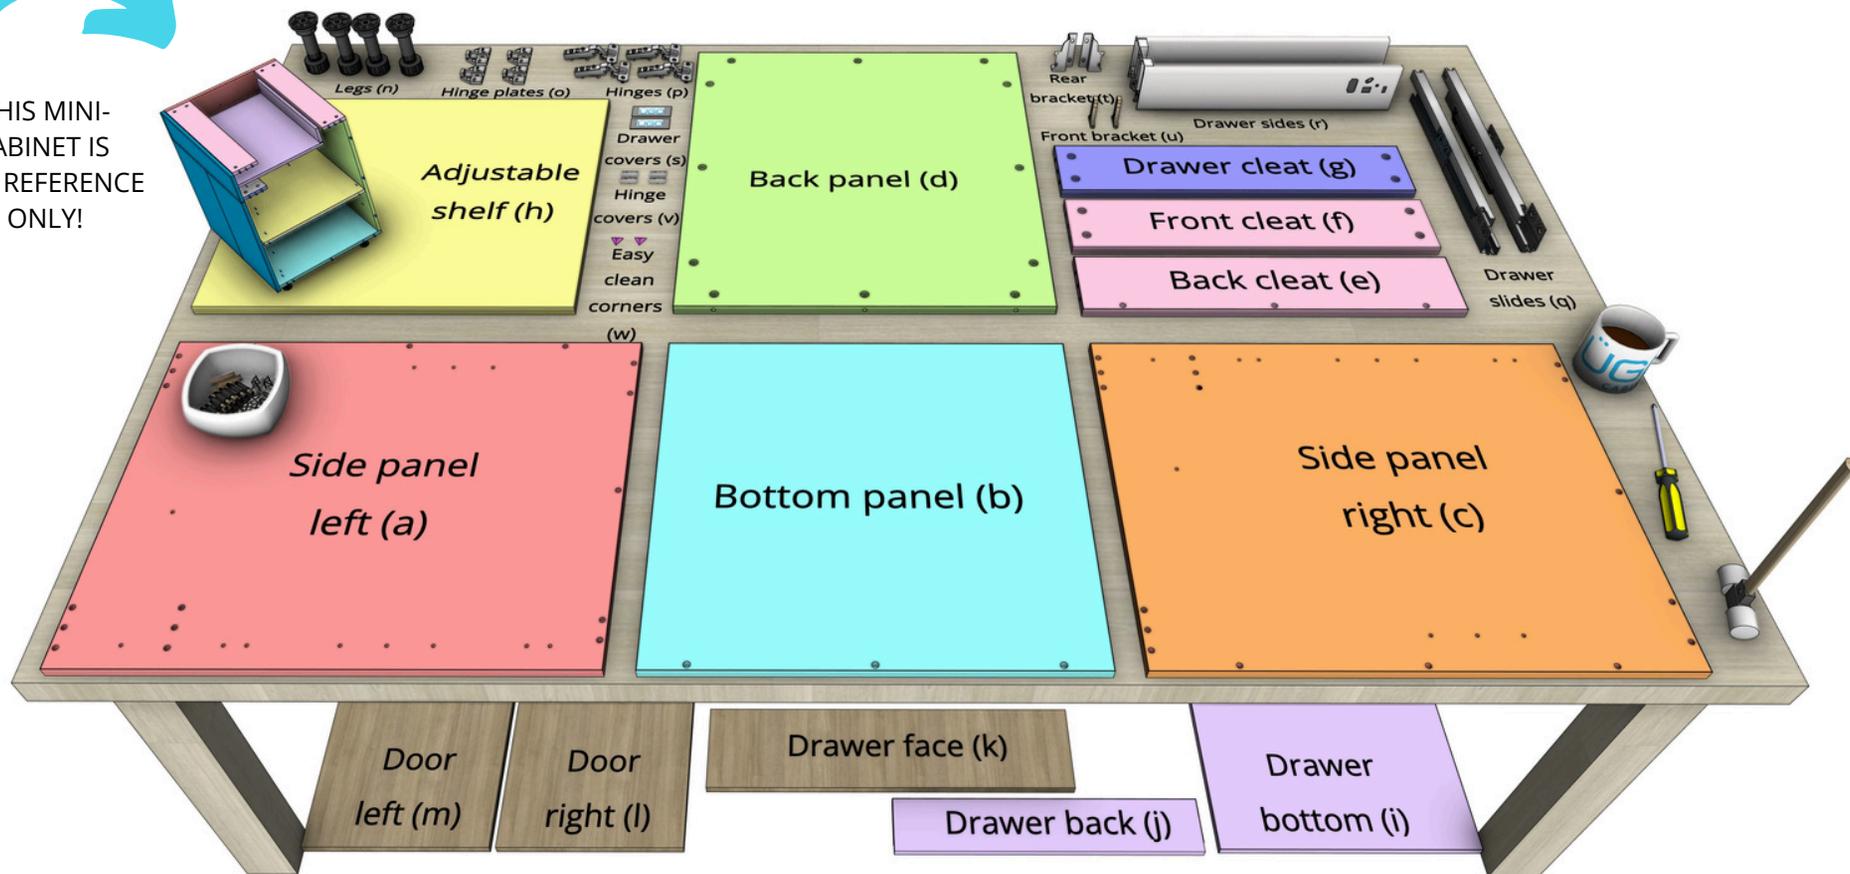

STEP 1: Grab A Coffee And Layout Your Case Pieces

* Find a suitable workspace, ideally a large table (less bending and lifting for you!) and layout all the pieces as shown. Check to make sure you have everything you need.

* You will notice throughout these assembly instructions that we always show the pieces you will actively be working on in colour while the others will be in grey.

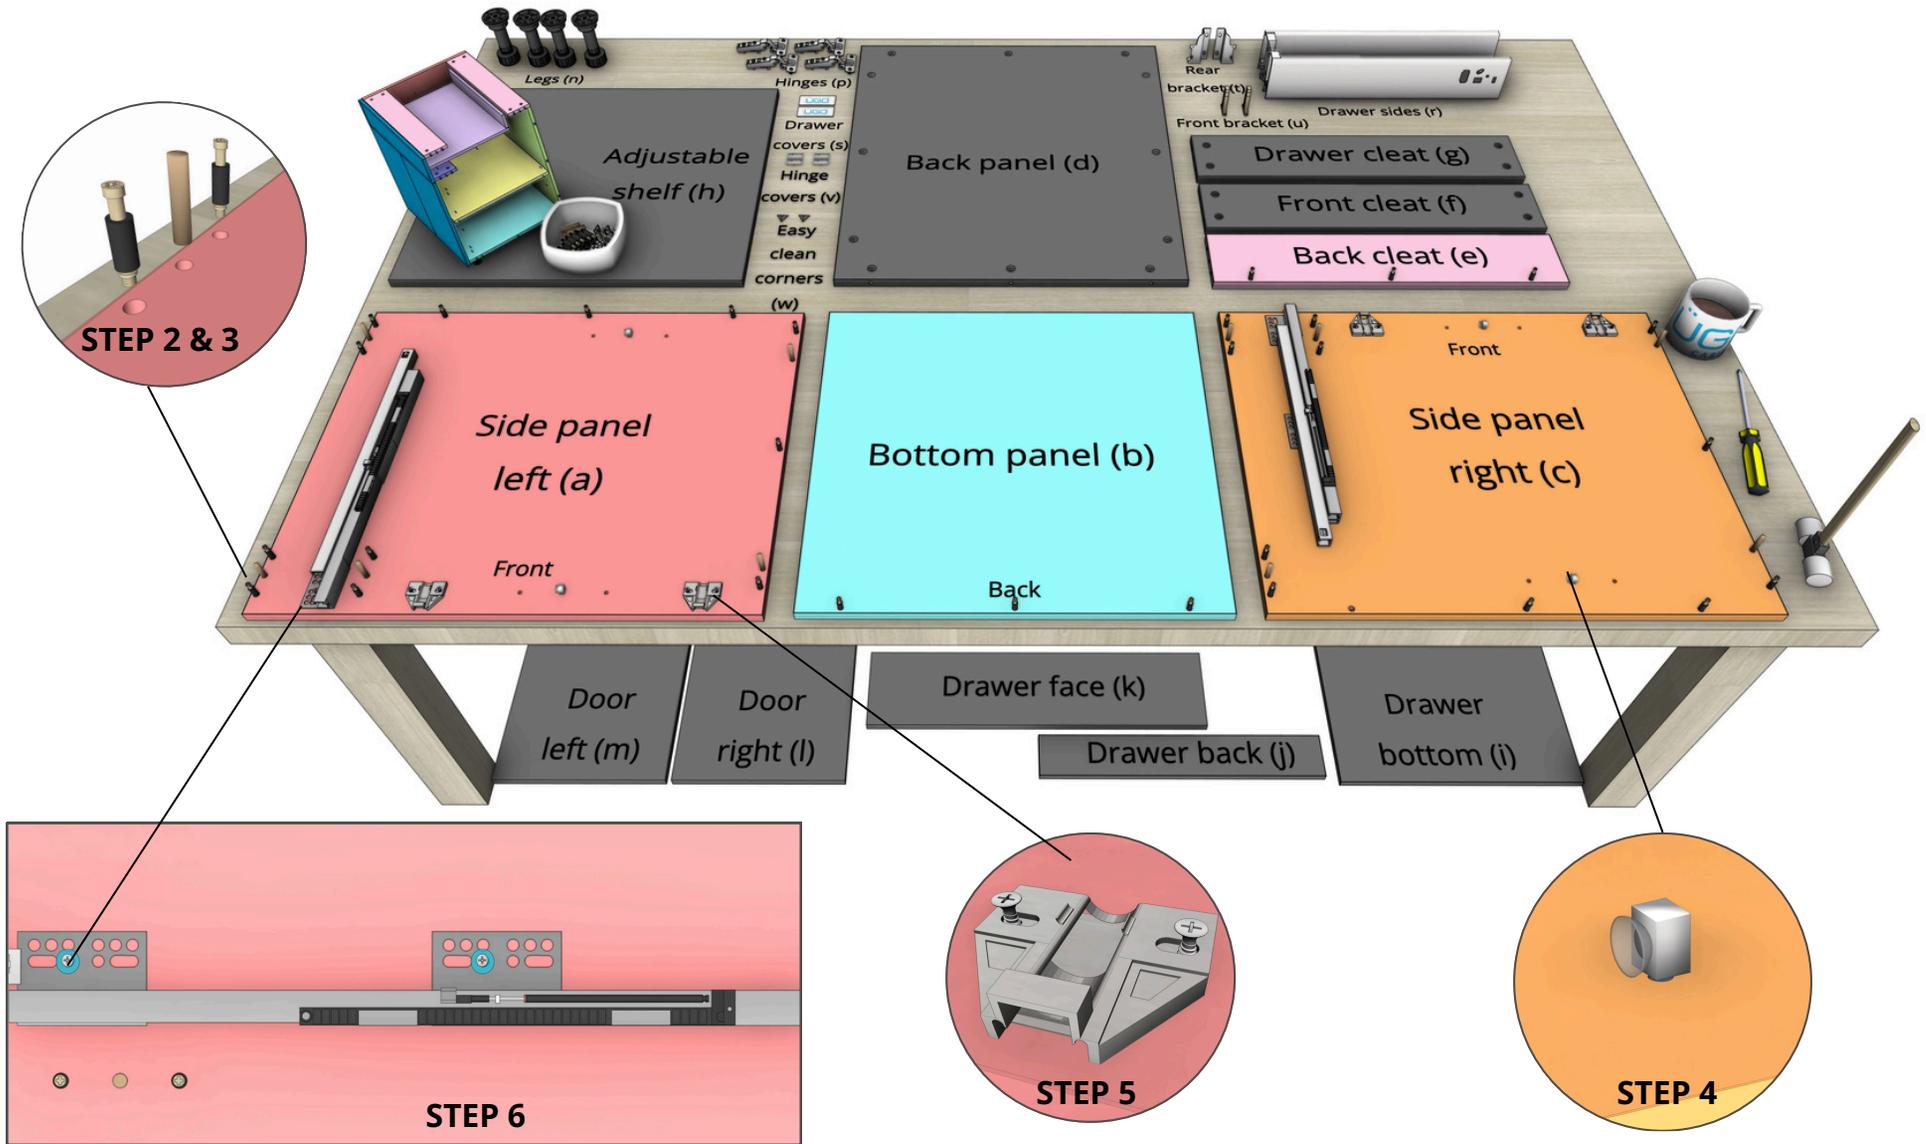


STEP 2: Using your Philips screwdriver, install cam fasteners into Side Panel Left **(a)**, Bottom Panel **(b)**, Side Panel Right **(c)** and back cleat **(e)**

STEP 3: Using your mallet, install dowels into Side Panel Left **(a)**, and Side Panel Right **(c)**


STEP 4: Place shelf clips into Side Panel Left **(a)**, and Side Panel Right **(c)**

STEP 5: Using your screwdriver, install hinge plates into Side Panel Left **(a)**, and Side Panel Right **(c)**

STEP 6: Using your screwdriver, install screws into drawer slides on Side Panel Left **(a)**, and Side Panel Right **(c)** - screw holes shown in blown up image.

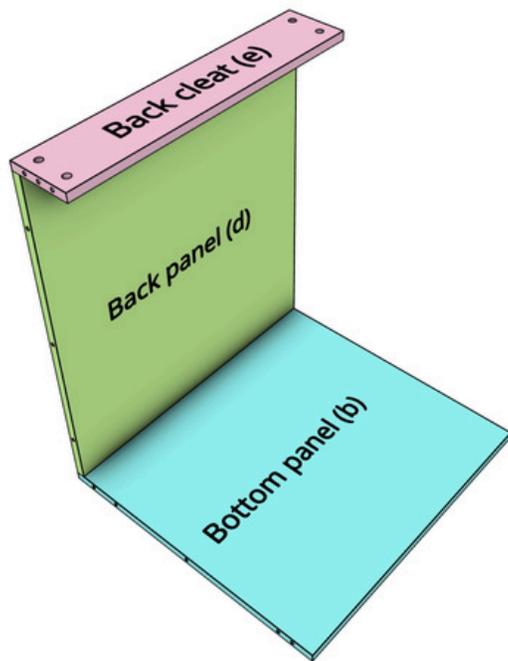


STEP 7: Place Back Panel (d) on the fasteners of Bottom Panel (b). Place Back Cleat (e) on fasteners of Back Panel (d).

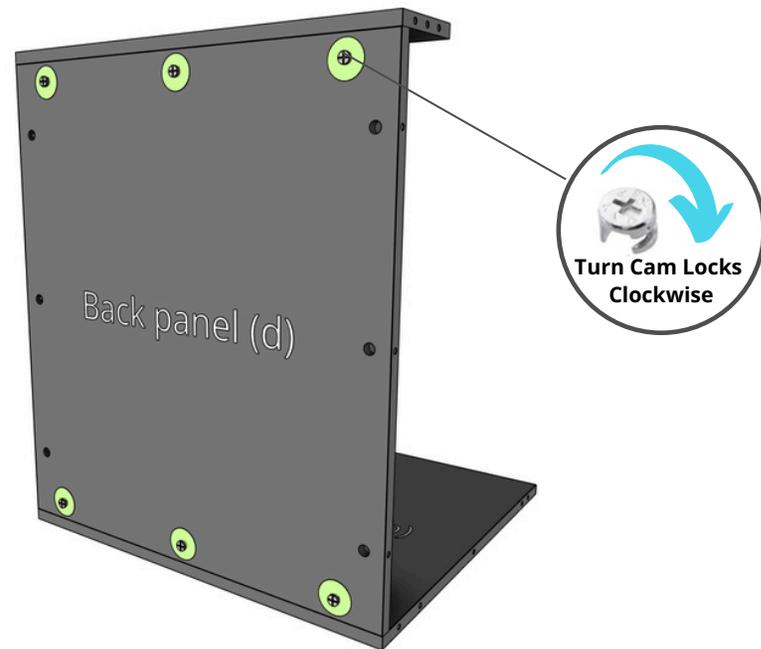

STEP 8: Insert camlocks into Back Panel (d). Using your screwdriver, turn clockwise to secure.


ÜGO

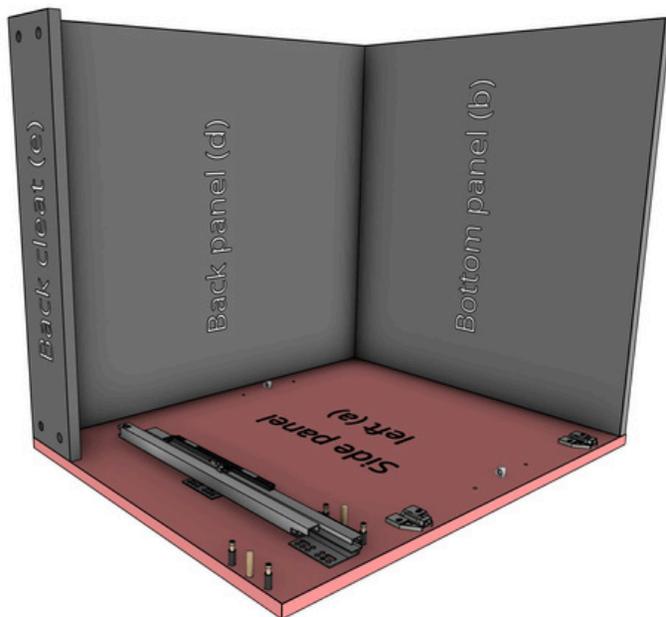

STEP 9: Lay this piece (b,d,e) onto the fasteners of Side Panel Left (a) as shown.




STEP 10: Insert camlocks into Bottom Panel (b) and Back Panel (d) as shown and using your screwdriver, turn clockwise to secure.

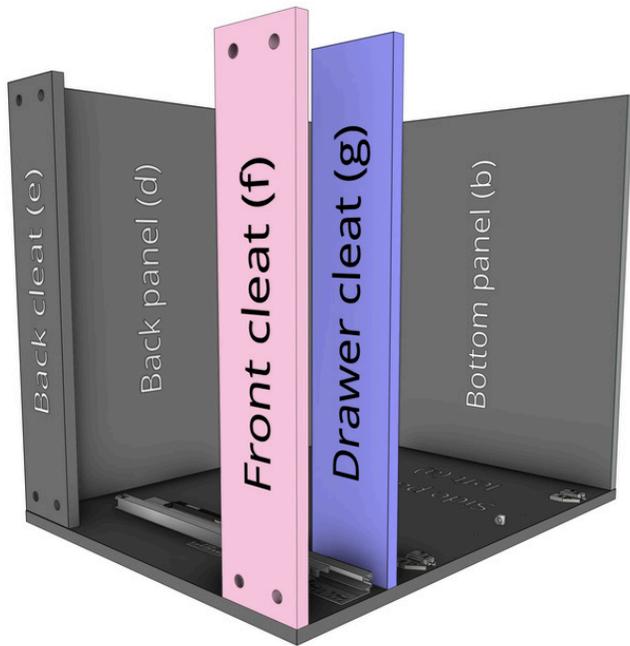


STEP 11: Place Front Cleat (f) and Drawer Cleat (g) on dowels and fasteners as shown.




STEP 12: Place Side Panel Right (c) on top of cleats and Bottom Panel (b) and Back Panel (d) as shown.

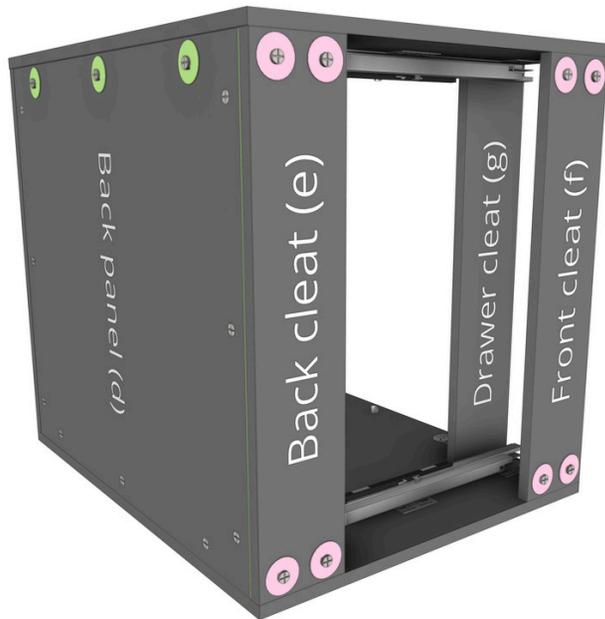

STEP 13: Position your cabinet as shown and insert cam locks into Back Cleat (e), Back Panel (d), and Front Cleat (f) and using your screwdriver, turn clockwise to secure.

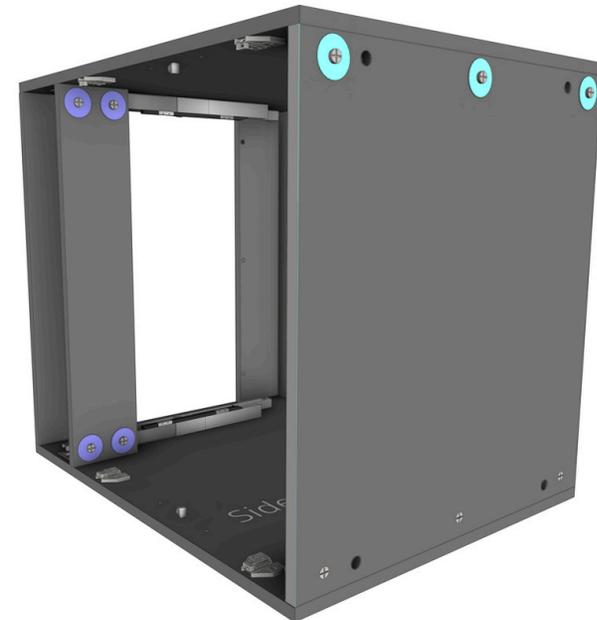

STEP 14: Rotate your cabinet as shown and insert highlighted cam locks. Using your screwdriver, turn clockwise to secure.

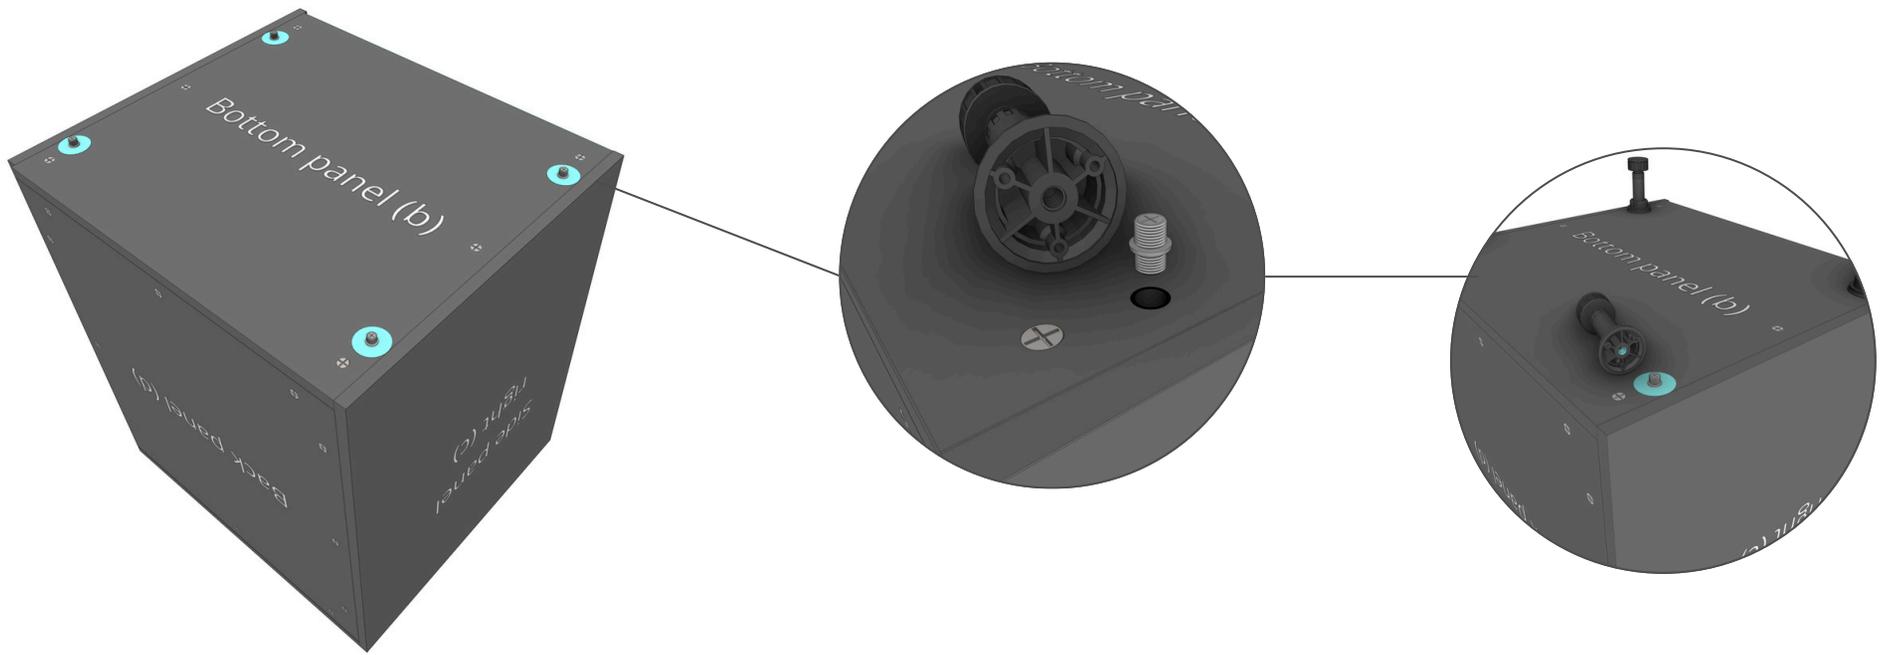


STEP 15: Flip your cabinet upside down so you can attach the Adjustable Legs (**n**) to Bottom Panel (**b**). Using your hands, screw the leg fastener screws into each of the four leg holes. Screw on the legs.


ÜGO



STEP 16: Using your screwdriver, secure screws into each Adjustable Leg (**n**).

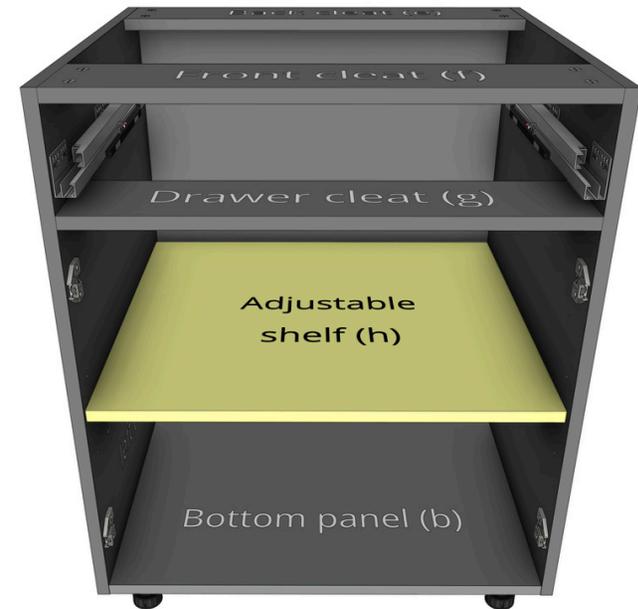


STEP 17: Flip your cabinet right side up. Place Adjustable Shelf (**h**) on the shelf clips you already installed.

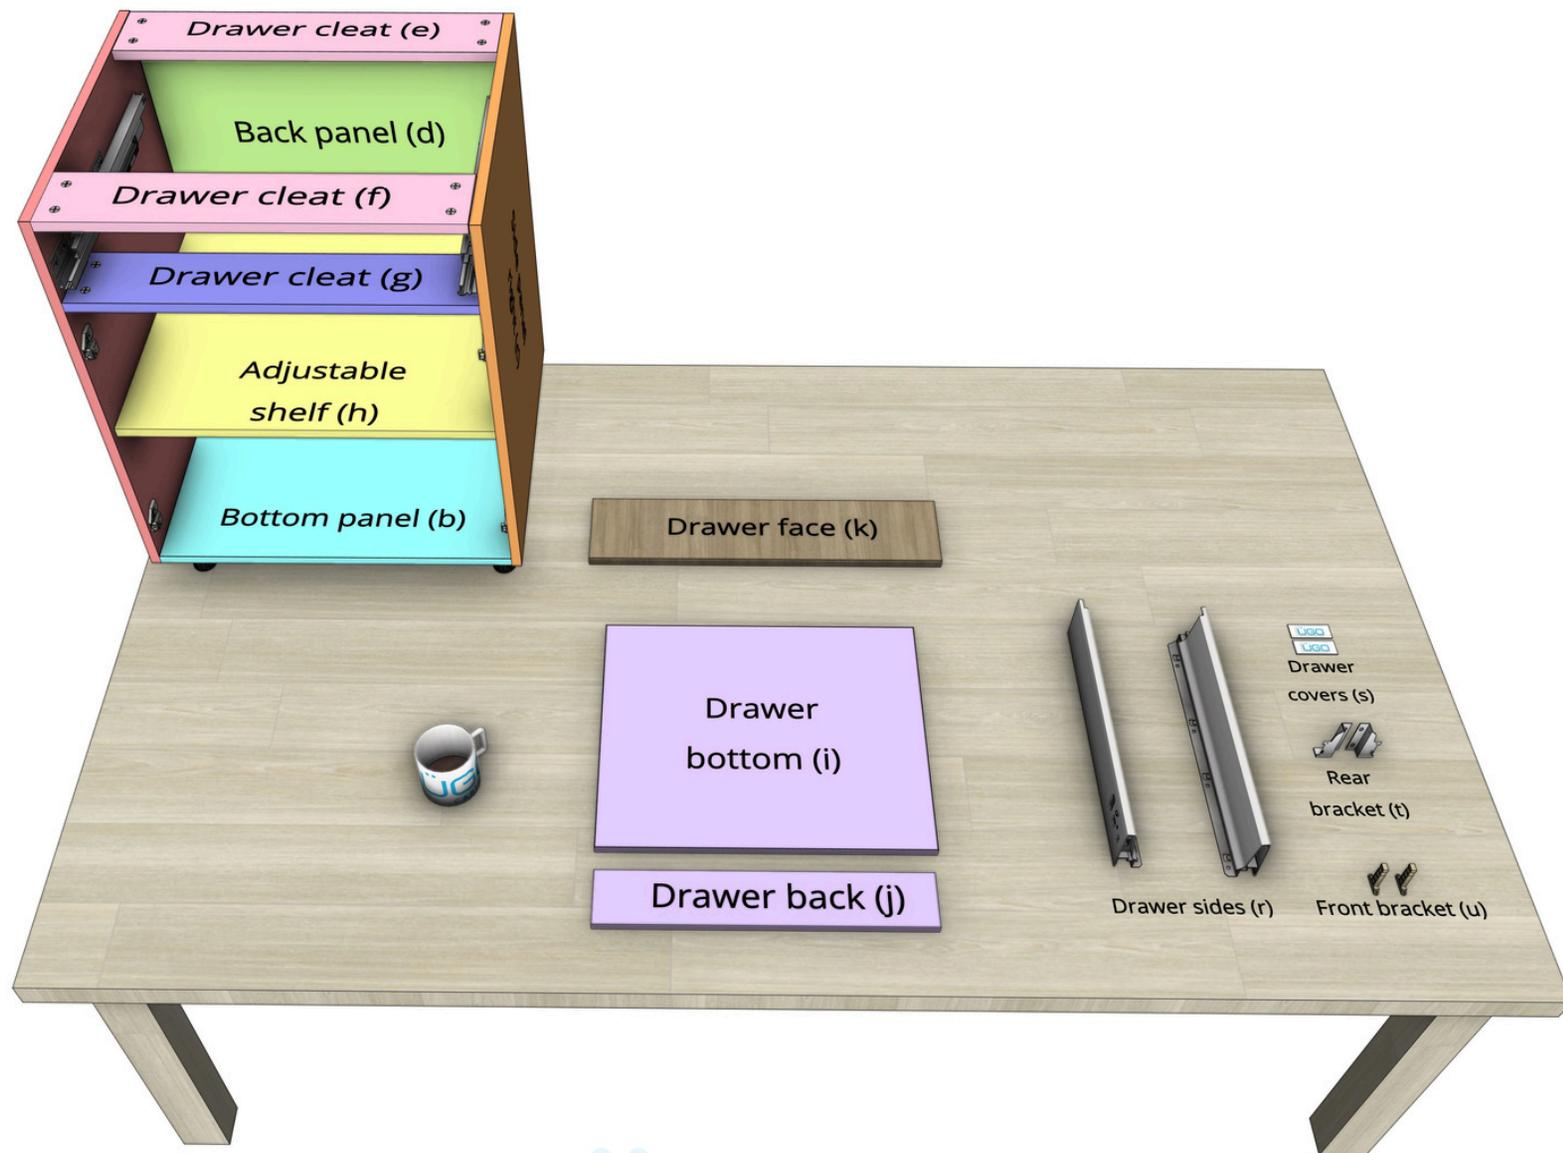

STEP 18: Now it's time to assemble your drawer. Layout all your remaining pieces on your workspace as shown in the image. The cabinet in the right hand corner highlights what your cabinet should look like.



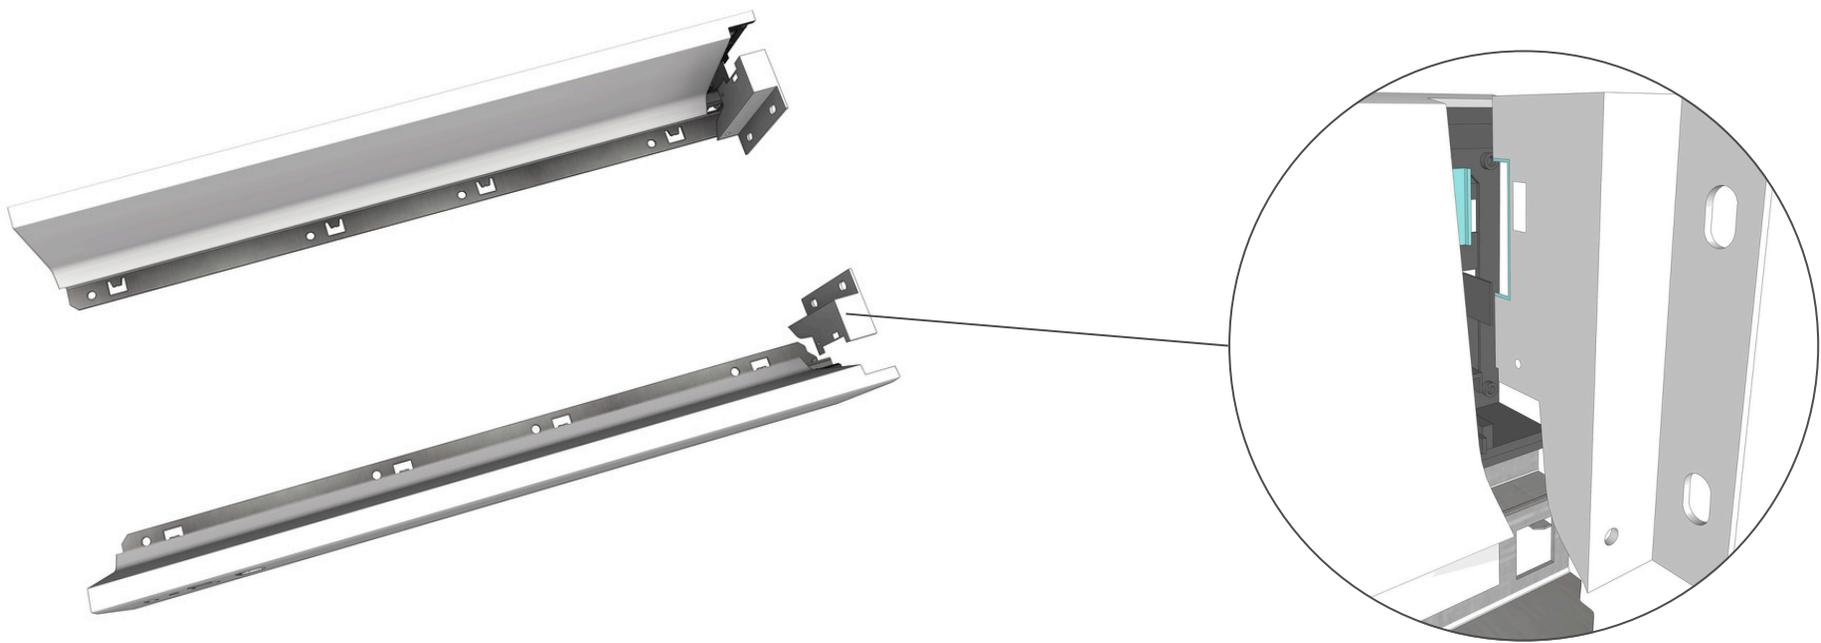


STEP 19: Position the Rear Brackets (**t**) on the Drawer Sides (**r**) as shown and snap into place.

ÜGO



STEP 20: Place your Drawer Back (**j**) into the Rear Bracket (**t**) as shown. Hold it steady, because it isn't secured yet.

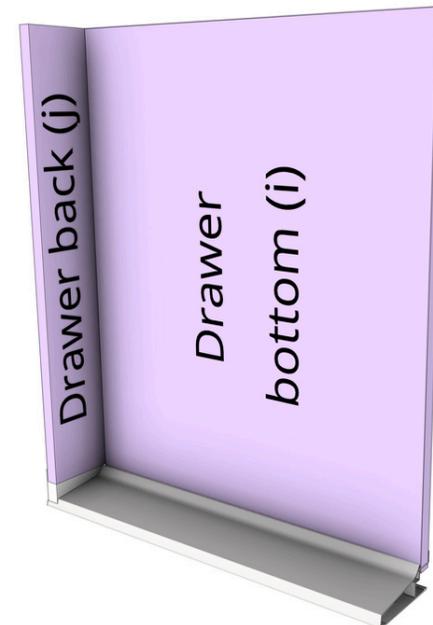

STEP 21: Place the Drawer Bottom (**i**) in the Drawer Side (**r**). Keep holding it steady while squaring up the corners!




STEP 22: Flip your drawer box over and using the screwdriver, screw in screws into each of the holes shown.




STEP 23: Place drawer box into remaining Drawer Side (r) and Rear Bracket (t). Using screwdriver, screw in screws into remaining holes.


ÜGO

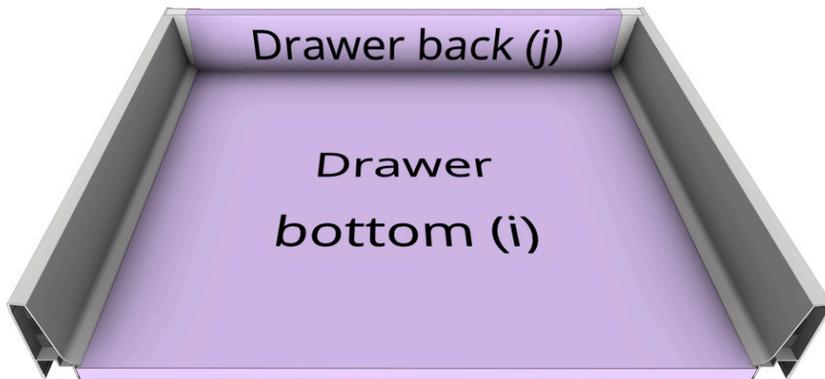

STEP 24: Flip your drawer right side up.

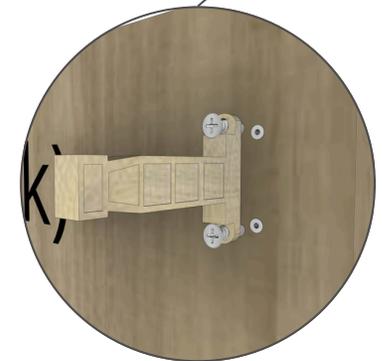

STEP 25: Attach Front Bracket (u) to back of Drawer Face (k) with your screwdriver and screws.

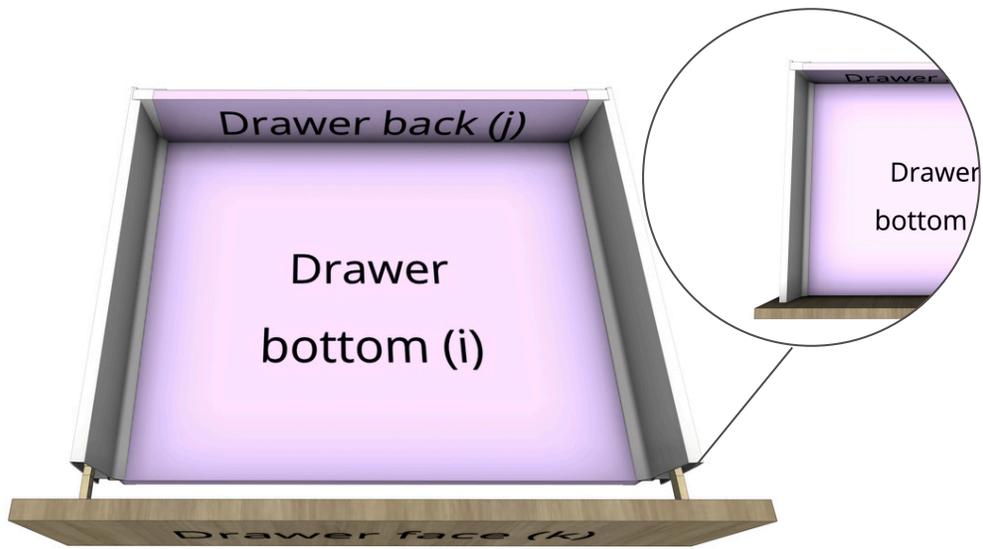

STEP 26: Slide the Drawer Face (k) into the front of the Drawer Sides (r) until secure.




STEP 27: To install your assembled drawer, rest the drawer on the Drawer Slides (q) and push in. You should hear a “click” sound.




STEP 28: Click on the UGO Drawer Covers (s). This helps us build our brand, so thank you!




STEP 29: You are almost finished! Time to install your doors...

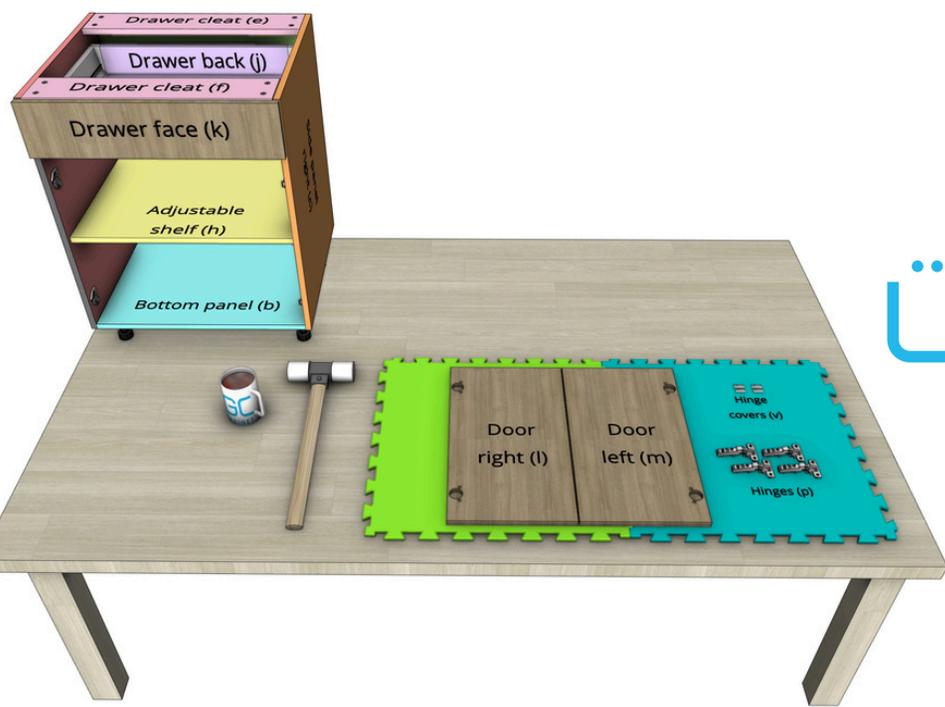

STEP 30: Lay your Doors (**l & m**) Hinges (**p**) and Hinge Covers (**v**) out. We recommend placing foam mats (as shown), a blanket or a piece of the cardboard your cabinets came in, under the doors to minimize the chance of scratching and provide a protective buffer.

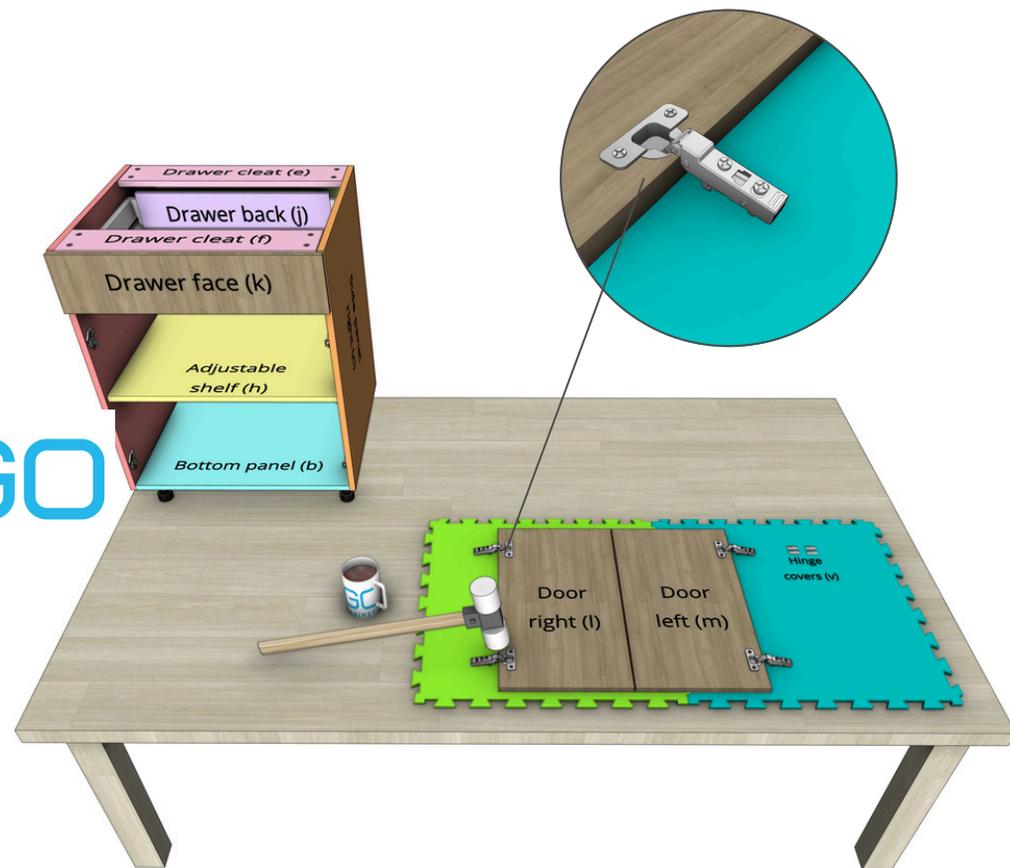


STEP 31: Using your mallet, gently hammer in the Hinges (**p**) in the pre drilled holes on Door Right (**l**) and Door Left (**m**).

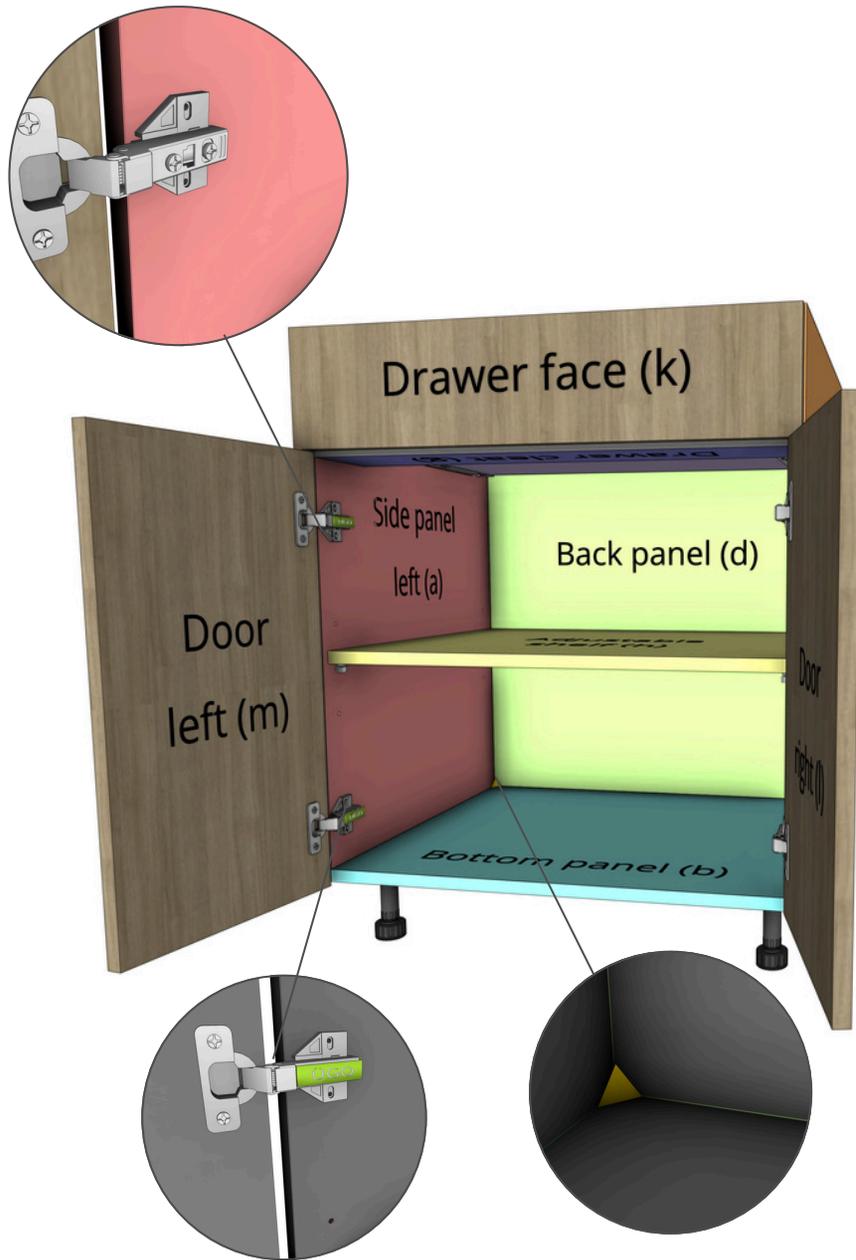


STEP 32: Install Door Left (m) by snapping the Hinges (p) onto the Hinge Plates (o). Repeat this step for Door Right (l).

STEP 33: Install UGO Hinge Covers (v) and Easy Clean Corners (w)


If your door is ...

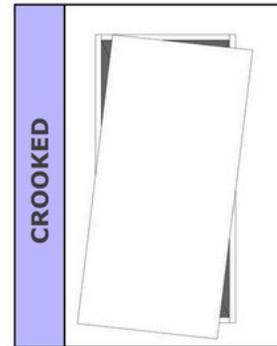

Use the Philips screwdriver and adjust using the screw highlighted in pink. To decrease the overlap turn the screw clockwise. To increase the overlap, turn the screw counter clockwise.

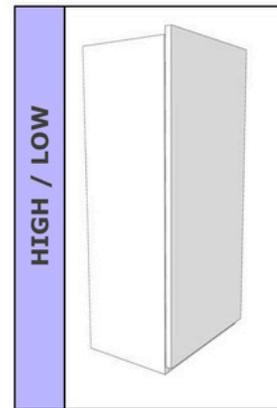

You're going to find a mounting plate on the inside of the cabinet that the hinge connects to. Use the Philips screwdriver and adjust the highlighted screw clockwise or counter-clockwise depending on whether you need to raise or lower the door.

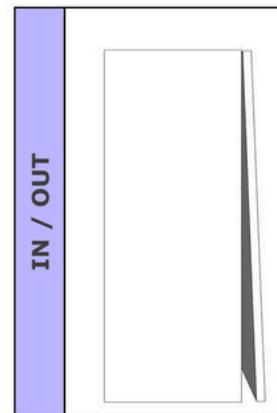

If the top of the door is sticking in/out, turn the highlighted screw on the top hinge clockwise to bring the door in and counterclockwise to bring the door out. If the door is sticking in/out on the bottom, do the same but on the bottom hinge.



STEP 34: Your doors and drawer may require some adjustments. Follow the instructions if your doors need adjusting. To adjust drawer, see next step.

Common Drawer Adjustments ...



- Slide Release:** Pinch or pull the grey lever up on both sides of the drawer at the same time. This will release the drawer box from the drawer slides that are attached to the case.
- Drawer Front Release:** Using a Philips head screw driver, turn the screw on the right side of the drawer clockwise. The right side of the drawer face will release. Turn the same screw on the left hand side and the left hand side of the drawer box will release.
- Up and Down Adjustment:** Using a Philips head screw driver, turn the screw on the right side of the drawer box to raise and lower. Note. the left hand side does not have this adjustment screw.
- Left and Right Adjustment:** Using a Philips head screw driver, turn the screw on the right side of the drawer box to move left or right. Note. the left hand side does not have this adjustment screw.

STEP 35: Follow the instructions if your drawer needs adjusting.

Thank you for purchasing



Or just scan this
QR code, it will
take you
directly to our
Google Reviews



ÜGO
CABINETS

If you have 2 minutes, we would love for you to write a Google review [LINK HERE](#) and share your experience with us!

If you have any suggestions that might make your experience better, please email us at hello@bluemountainkitchens.ca